

# smartDRIVE

## Push Pull Hand Controls

A better driving experience with **smartDRIVE**

**smartDRIVE** has been specially designed for people not able to operate the foot pedals in automatic vehicles. Tailor made to suit each vehicle, the SmartDrive's optimum positioning allows total control and comfort. Unlike most other push pull hand controls on the market, the control rods connecting the **smartDRIVE** to the brake and accelerator pedals, are routed inside the steering column. This means comfort and ease when getting in and out of the vehicle – and no bruised knees!, as well as much safer driving for other drivers using the foot pedals.

**smartDRIVE** provides a much safer driving experience. The connection brackets are positioned high up on the foot pedals which reduces the risk of catching your shoe on them.



### Simplicity itself

- To accelerate, pull the SmartDrive handle towards you
- To decelerate, release the handle
- To brake, push the handle away from you



### Key benefits

- Control rods are fitted inside the steering column on the vast majority of vehicles, enabling airbags fitted within the steering column to still be active – a much safer drive and greater comfort and ease on entering and exit of the vehicle
- Full kick down is achieved on almost every vehicle
- Possible to have an integral indicator switch built into the handle
- Different size of handle available to best suit your needs
- Autochair can offer you a 5 year guarantee on your **smartDRIVE**
- Unlike some cable connected controls, which could stretch over time, **smartDRIVE** uses rods, ensuring consistent performance

# smartDRIVE<sup>+</sup>

## Push Pull Hand Controls

### smartDRIVE<sup>+</sup> for additional control

With smartDRIVE<sup>+</sup> you have the added advantage of an indicator switch built into the handle allowing you to operate either the left or right indicators, without taking your hand off the steering wheel.

Whilst some customers are happy that they can safely operate the standard indicator lever on the smartDRIVE steering column, others have found that driving with smartDRIVE<sup>+</sup> gives them more control.

Did you know that you can operate up to 13 'secondary functions' of your vehicle by using the smartSTEER in conjunction with the smartDRIVE.



Other products in the smartDRIVING CONTROLS range include:

#### smartSTEER

Remote control of up to 13, secondary functions in your vehicle.



#### smartRELEASE

Easy release mechanism for your handbrake. Requires less strength and dexterity.



#### smartGUARD

Quick release pedal guard to prevent accidental use of the foot pedals.




#### smartTWIN-FLIP

Flip up left foot accelerator to switch from left to right foot accelerator operation.



#### smartBALL smartBALL<sup>+</sup>

Standard or Quick Release steering balls for safe one handed steering.

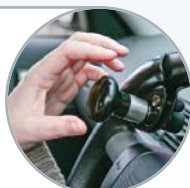

#### smartHINGE

Hinged accelerator pedal to flip up the accelerator pedal when not required.



Motability accredited.  
NEMEDA approved.

Autochair have over 30 years experience in the design and manufacture of vehicle adaptations to assist people with disabilities and reduced mobility - call us today to find your new freedom with Autochair:  
**0800 214 045**

Autochair reserve the right to change product specifications or appearance without prior notice through product development and improvement. We aim to ensure our customers are aware of this at the time of ordering.